


Print on letter size paper
(8 1/2" x 11"). Choose 'actual
size'. DO NOT SCALE.

T3x00 Series Wall Mounting Template


PN 0535-0044-000

MT1262/1015

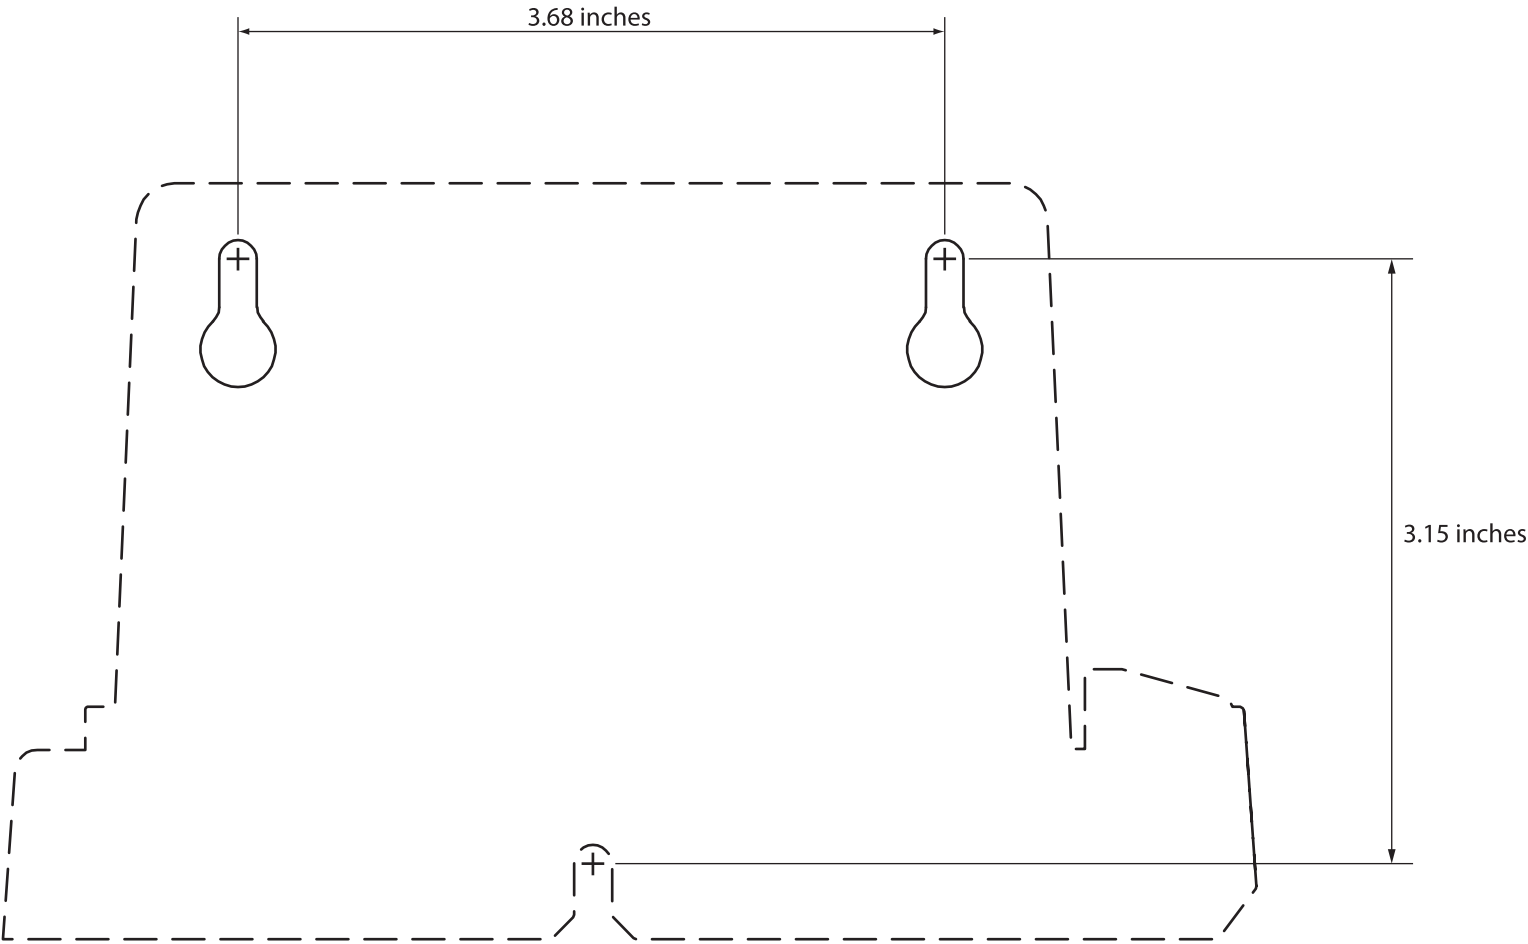

Fasteners Required (Not Included)

- Three #8 screws (length sufficient for wall material)
- Three drywall anchors (if mounting on drywall)

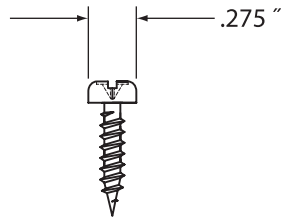


(3) Phillips
Pan Head Screws



(3) Plastic
Screw Anchors

Tools Required

- Pencil or other marking device
- Phillips Head Screwdriver
- Electric or cordless drill (if using drywall anchors)
- 3/16" drill bit (if using drywall anchors)

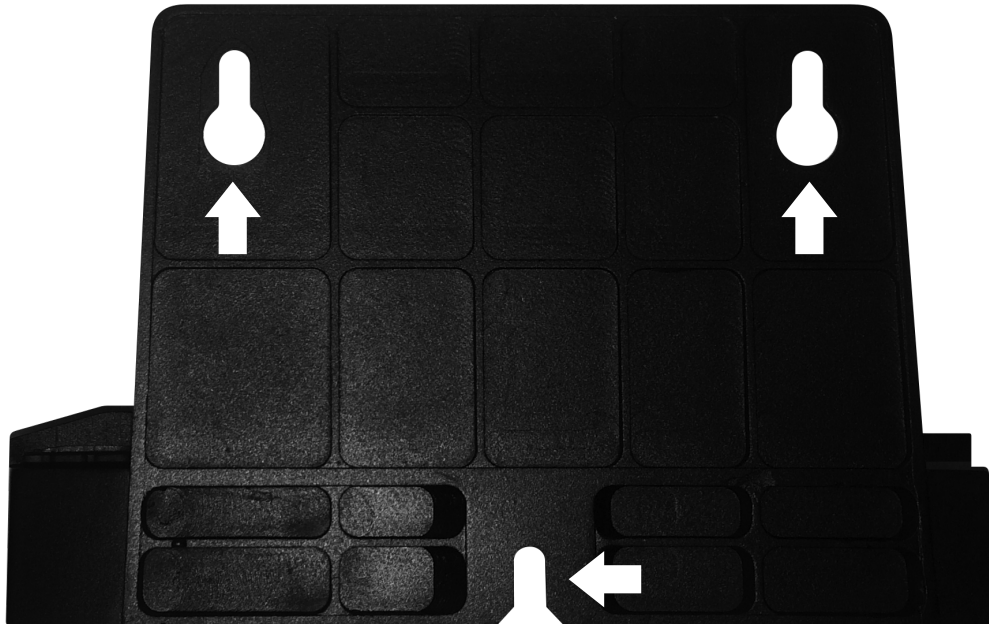**Mounting Instructions**

1. Place the template on the wall in the position the bracket will be mounted.
2. Mark the mounting holes. If mounting on wood, drill holes for the screws. If mounting on drywall, drill holes to accept drywall anchors then gently tap in the drywall anchor up to the thread using the handle of the screwdriver. Then use the screwdriver to install the anchor into the wall.
3. Next install the screws into the anchors leaving the screws extended about 0.28 inches from the wall.
4. Locate the bracket keyhole openings over the screw heads and push down lightly on the bracket to lock it onto the screws.
5. Line up the base of the unit with the triangular guides on the bracket, then slide the unit to the left. It will click into place.
To remove the unit, pull down on the tab on the bottom of the bracket and slide the unit to the right.

Illustrations Not to Scale

